


ProGuard

HEARING PROTECTION

INSTRUCTIONS: Please Read carefully before using your ProGuard Bangbusters

1. Before fitting any custom fit ProGuard products, please make sure your hands are clean.
2. BangBusters are active and will require a single A10 type Zinc Air battery which will give approximately 80 hours of continuous operation. Please make sure that you familiarise yourself with the system, in the first instance lay your new Bangbusters on a table or something similar. Using your finger or thumbnail carefully open the small door; this is the battery cradle. Position the BangBuster so that the plastic ridge is at the bottom of the tray. Remove the battery from the packaging and peel off the tab. Now looking at the battery, the flat surface with the + sign should be uppermost facing you, slide the battery directly into the compartment and close the door. Spare batteries are available from www.enhancedlistening.co.uk or most major pharmacies.

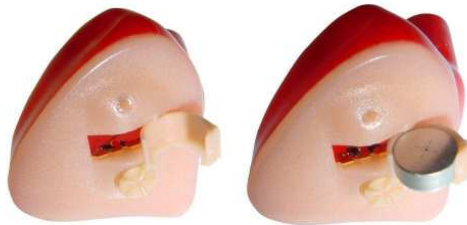

3. The volume controls are also the on/off switch. They are operated by turning them forward for on and to increase the volume. The controls operate in exactly the same direction (forward and use your thumbs) once they are inserted into the ear. The Blue (Left) control will operate in an anti-clockwise direction and the Red (Right) clockwise. Sounds a little confusing but when they are in your ears you will appreciate this attention to detail. Please be aware, if you turn on the BangBusters without fitting them into your ears they will probably whistle (acoustic feedback). This is perfectly normal and will not occur once they are properly inserted into your ear.
4. Now we are ready to insert into your ears. Reach around your head and pull up and back on your outer ear. This straightens out the ear canal, making way for a perfect fit when your Bangbuster is inserted. N.B. The orientation of your ear canal is backward and upward, in the general direction of the top centre part of your head .
5. The left Bangbuster is clearly marked in Blue and right is Red; take care to ensure they are fitted in the correct ear.
6. Hold the end of the Bangbuster and insert it into your ear canal until you feel it fit snugly into the contours of your ears. The narrow end of the Bangbuster, of course enters the ear first.
7. Quickly test the fit, clap your hands loudly in front of the Bangbusters (when switched on), this will also make sure the electronic noise reduction circuitry is switched on and working.
8. Adjust the volume to a level you are comfortable with.
9. Always remove your Bangbusters slowly. Break the seal with the ear canal gently by twisting slightly. If they are removed too quickly, there is a small possibility you could damage your ear drum.
10. A cerumen (ear wax) filter is fitted to the audio output spout and this may occasionally become blocked. If the Bangbuster sounds quiet or weak this will probably be the cause. To remove, use the metal threaded end of the removal blue tool, it comes as part of the dial pack of spare filters packed with your BangBusters. Screw into the wax trap with about two turns clockwise. Hold the Bangbuster and gently pull the removal tool until the old wax trap releases. Unscrew it from the removal tool and throw away. To insert a fresh Wax Trap place a new one on a clean flat surface with the filter part face down. Insert the blue part of the tool into it, push gently and it will "click" when engaged. Then push the new filter into the BangBuster until flush. Pull on the tool whilst tilting it to one side to remove. Regular changing of the wax trap will ensure peak performance of the BangBusters. Wax build up can significantly attenuate the audio signal and this can be more prevalent when working in hot conditions. Replacement wax guard filters are available from www.enhancedlistening.co.uk .Search for wax traps.

Please Note: Never immerse your BangBusters in water to clean them, use a hygiene wipe or something similar to keep them clean and replace the wax guard regularly. Remove the battery and discard if storing for long period of time. Zinc Air batteries are activated when the TAB is removed and will remain usable for about 30 days. After this period the batteries will lose charge even if they have not been used. NEVER remove the tab from the batteries until ready for use.

Guarantee:

ProGuard Bangbusters are guaranteed against any problems that may arise from or caused by manufacture for a period of 12 months. It does not cover normal wear and tear or loss of the product.

ProGuard UK,

Market by **Sensorcom Ltd**,
4 – 6 Thayers Farm Road,
Beckenham
BR3 4LZ
www.proguarduk.co.uk
+44 870 901 6070